

Driving Vehicle into Workshop	
Instrument gauges, warning/control lights and horn	Check operation
Clutch	Check operation/adjust, if necessary
Washers, wipers	Check operation/adjust, if necessary
Inside Vehicle	
Exterior and respective control lights; instrument cluster illumination	Check operation/condition
Under Hood	
Fuel filter	Drain water, if not renewed - Diesel models (with drain facility)
Under Vehicle	
Engine	Drain oil and renew oil filter
Tyres	Check wear and condition, especially at tyre wall, note tread depth RFmm, LFmm, LRmm, RRmm
Brake system +	With wheels on, check brake pads and discs for wear. Check rear brake linings for wear (using drum brake inspection hole). (More often under severe duty conditions)
Outside Vehicle	
Engine	Refill engine oil
Tyres	Adjust pressure
Spare wheel	Adjust pressure, check wear - condition (note tread depth)
Service reminder sticker	Affix to driver side B pillar
Extended Period Maintenance	
Brake system	Every 2 years - Renew - brake fluid (LTS 12 154 4)
Air conditioning	Every 3 years - Check temperture at the evaporator outlet tube. Check air conditioning lines for damage and leaks (LTS 34 619 1) (TSB 67/2002)
Cooling system	Every 10 years - Drain, flush and refill with purple Super Plus (LTS 24 122 4)
Auxiliary drive belts	Every 125 000 miles/10 years - Renew
Auxiliary drive belts	Every 100 000 miles/8 years - Renew rear belt
Extra Services and Additional Offers * (optional - upon customer request / charged seperately)	
Interior Filter Replacement	Pollen / Odour filter - remove and install. (LTS 34 350 1)
AC Maintenance Package	Air Conditioning (A.C.) system check. Apply A.C. cleaner to air distribution system. (LTS 54 552 4)

+ Visual body and paint check should be carried out during these operations on vehicles built from 03/2002 onwards - see detailed Check Sheet if applicable.

Separate labour charge dependant on market regulations.