

# Keys and remote controls

## GENERAL INFORMATION ON RADIO FREQUENCIES

See Type approvals (page 183).

### WARNINGS



The radio frequency used by the remote control can also be used by other short distance radio transmissions (e.g. amateur radios, medical equipment, wireless headphones, remote controls, alarm systems etc.). If the remote control frequencies are jammed, you will not be able to use any remote functions, the vehicle will not lock or unlock, nor will the alarm be armed. However, you can lock/ unlock with the key.




The vehicle or luggage compartment will be opened if the buttons are pressed unintentionally, without the remote control being directed towards the vehicle (e.g. in your pocket).

The range between transmitter and vehicle is environmentally influenced and varies greatly.

## PROGRAMMING THE REMOTE CONTROL

A maximum of four remote controls (including the ones supplied with the vehicle) can be programmed.

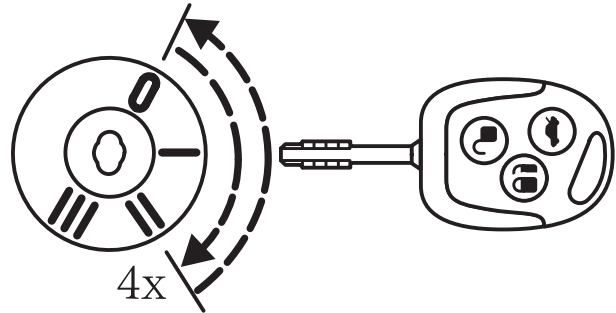

E72191

To programme a new remote control:


- Turn the ignition key to position II four times within six seconds.
- Switch off the ignition. A tone sounds to indicate that it is now possible to programme a new remote control.
- Press any button on a new remote control. A tone will sound as confirmation. Repeat this last step for all of your remote controls, including the original.
- Switch the ignition back on or wait for ten seconds without programming another remote control to end remote control programming. Only the remote controls which you have just programmed are now able to lock and unlock your vehicle.

# Keys and remote controls

## Re-programming the unlocking function

You can change the unlocking function so that pressing the unlock button once deactivates the central locking or double locking, disarms the anti-theft alarm system and unlocks the driver's door. Pressing the unlock button twice within three seconds also unlocks the passengers' doors.

If you want the tailgate to be locked while driving, press the locking button on the driver's door to activate central locking.

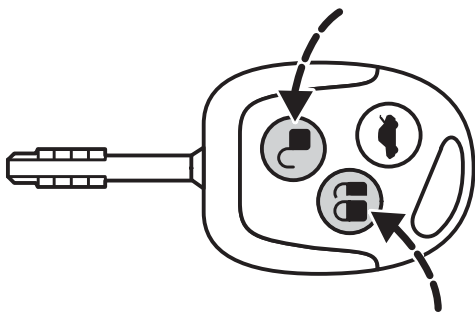


E72190

In order to re-programme the function, press and hold the unlock and lock buttons simultaneously for at least four seconds with the ignition switched off. The direction indicators will flash twice to indicate that the unlocking function has been successfully re-programmed.

Pressing and holding both buttons simultaneously for at least four seconds again will change the function back.


## CHANGING THE REMOTE CONTROL BATTERY

If the range of the transmitter in the key decreases gradually, the battery (type 3V CR 2032) should be replaced.

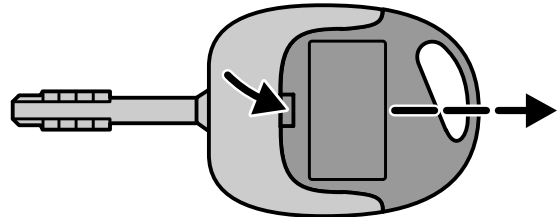

E68726

- Carefully separate the transmitter unit from the key using a flat object (e.g. a screwdriver) at the recess on the back.
- Carefully prise out the battery with the flat object. Fit the new battery between the contacts with the + sign facing downwards. Reassemble the transmitter unit in reverse order.

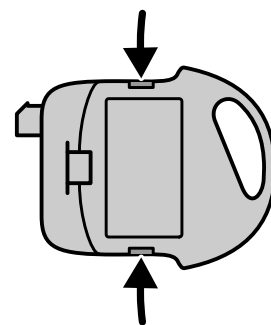


E68727

- Open the transmitter unit by separating the retaining clips on the sides with the flat object.

# Keys and remote controls

---

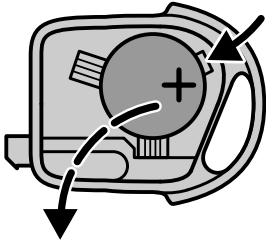

E68729

- Carefully prise out the battery with the flat object. Fit the new battery between the contacts with the + sign facing downwards. Reassemble the transmitter unit in reverse order.